



Uputstva za montažu


Beton

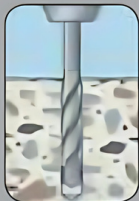


Izbušiti otvor

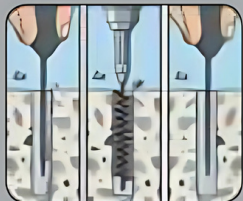

Očistiti izbušenu rupu: četiri puta izduvati, četiri puta očistiti četkom, četiri puta izduvati. Od M20 i dubine $\geq 240\text{mm}$ produvati sa komprimovanim nezavljenim vazduhom uz upotrebu odgovarajuće mlaznice za komprimovani vazduh.

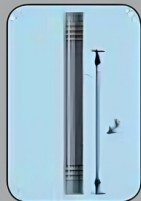

Označiti dubinu na anker šipki

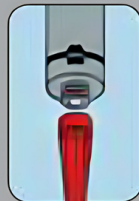


Zaviti mešač na bocu; koristiti pištolj za istiskivanje




Pre same upotrebe, istisnuti oko 10 cm mase (ali ne u sam izbušeni otvor)




Ispuniti otvor sa kompozitnom masom, počevši od dna

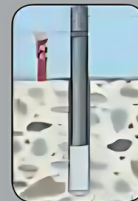


Utisnuti anker šipku u otvor sve do dna uz lagano okretanje

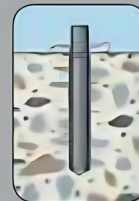

Vizuelno proveriti količinu mase, uz proveru oznake za dubinu

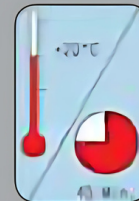

Pridržavati se naznačenog vremena sušenja kompozitnog maltera

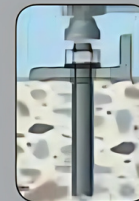

Ugraditi deo koji se pričvršćuje i pritegnuti ga propisanim momentom

Kartuša, 300 ml:

pre upotrebe iseći sloj filma i istisnuti oko 20cm mase

